IMPORTANT SAFETY INSTRUCTIONS

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:
Read all instructions before using (this furnishing).

DANGER - TO REDUCE THE RISK OF ELECTRIC SHOCK, ALWAYS UNPLUG THIS FURNISHING FROM THE ELECTRICAL OUTLET BEFORE CLEANING.

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. Close Supervision is necessary when this furnishing is used by, or near children,invalids, or disabled persons.
3. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
4. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service centre for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never drop or inser any object into any opening.
7. Do not use outdoors.
8. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
9. To Disconnect, turn all controls to the off position, then remove plug from outlet.
10. Be sure mirror is not in a position where it can reflect sunlight; reflected sunlight can cause fire.
11. Do not block openings. Do not use on a soft surface such as a bed, where openings may be blocked.
12. Turn switch to “off” position and unplug cord before replacing light bulbs.
13. Do not place or store appliance where it can fall or be pulled into a tub or sink.
14. If an appliance falls into water, unplug it immediately. Do not reach into the water.
15. Never use while sleeping.
16. Do not use a bulb greater than 20 watts. Use on any 120 volt 60 hertz AC electric outlet (ordinary house current). Do not use in any other electrical outlet. There is an electric outlet in base. Do not plug in it any appliance over 12 amperes.
17. To protect against electrical hazards, do not use while bathing or in the shower.
18. Unplug the appliance from outlet before cleaning. Do not leave appliance unattended when it is plugged in.
    FOR HOUSEHOLD USE ONLY

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

To reduce the risk of electric shock, this furnishing has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

1. Your circular, lighted makeup mirror will swivel so that you can use either the normal, flat mirror or the magnifying mirror located on the opposite side.

2. This Double-sided Mirror has a telescopic neck

and aligning the screw holes to the bottom half. If the holes don't line up, turn top half of mirror 180 .
5. Insert two knurled thumb screws into screw holes and hand tighten.

MAINTENANCE

Your lighted mirror is designed for household use and is virtually maintenance-free. No lubrication is needed.
If cleaning becomes necessary, disconnect the appliance from the power source and wipe exterior with a cloth. Clean mirror surfaces with a glass cleaner. Do not light until you are certain mirror is completely dry to protect against electrical hazards.
If any abnormal condition occurs, unplug the lighted mirror, allow it to cool, and return it to an authorized service center for repair.

STORAGE

Disconnect from electrical outlet. BE SURE DIRECT SUNLIGHT DOES NOT STRIKE MAGNIFYING SIDE OF MIRROR WHEN LEFT UNATTENDED;
REFLECTED SUNLIGHT CAN CAUSE FIRE. Allow to cool to room temperature before storing. Place in cool, dry area out of reach of children, where it will not be damaged.
Handle cord carefully for longer life; do not jerk or strain at plug connections, or wrap cord around mirror for storage. This could cause damage to the cord and the mirror could short circuit. To store mirror, coil cord loosely.

WARNING:
IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.

KEEP AWAY FROM WATER

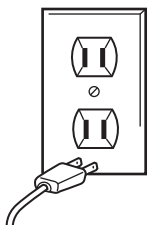

Everybody knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically alive even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

Public Service AD from Association of Home Appliance Manufacturers and Underwriters Laboratories, Inc.

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

which can be adjusted up or down 2 inches. Loosen the knurled nut at the center of the neck by turning the nut counterclockwise. Adjust the mirror to the desired height and tighten nut clockwise.

3. Plug cord into any standard 120 volt wall outlet. To turn on lights, simply turn the dial on the base to desired light setting.

4. After use, always turn switch to the "OFF" position.

5. This mirror features an electrical outlet in the base.

Power ratings on appliances plugged into this electrical outlet should not exceed 12 amperes.

6. The beauty and design of this mirror complements any decor. Therefore, you may wish to leave the mirror displayed. However, if you choose to store the mirror, see "STORAGE" for detailed information.

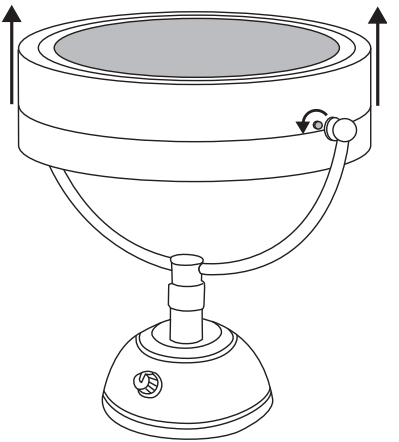

Figure 1

SPECIAL FEATURES

This lighted makeup mirror uses incandescent light bulbs with special coating, reproducing shadow-free lighting in four different settings: evening, home, office and day.

TO REPLACE BULB

CAUTION: TURN OFF POWER AND UNPLUG. ALLOW TO COOL AT LEAST 3 MINUTES BEFORE REPLACING BULB.

NOTE: Do not use a bulb greater than 20 watts. Contact a Conair service center at 1-800-3 CONAIR for replacement bulb information (ask for replacement bulb #RP34-clear, #RP35-blue). Bulbs are $1.50 a piece, includes shipping and handling.

1. Unscrew and remove knurled thumb screws from opposite sides of the mirror housing near the rotating hinges. (Fig. 1)
2. Carefully lift off the top half of the housing from the bottom half that is affixed to the stand.
3. Unscrew the old bulb and replace with the new bulb. (Fig. 2)
4. Carefully replace the top housing half after locating

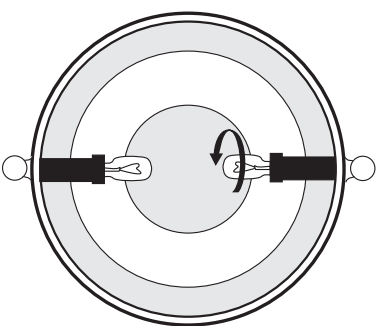

Figure2

LIMITED ONE YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt and $7.50 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

SERVICE CENTRE:
CONAIR CONSUMER PRODUCTS INC.
156 Parkshore Drive,
Brampton, Ontario L6T 5M1
1-800-472-7606
www.conaircanada.ca
Consumer Call Centre Email:
Consumer_Canada@Conair.ca
©2006 CONAIR CONSUMER PRODUCTS INC.
06CN1250

IB-5950

Double-sided Round Illuminated Mirror

With 4 Light Settings
and 8x/1x Magnification

Patented Variable Lighting

CONAIR®

User and Care Guide

Model BE67SNC